



ADS 2008
January 2008
Circuit Cosimulation Components

Advanced Design System 2008

© Agilent Technologies, Inc. 2000-2008

395 Page Mill Road, Palo Alto, CA 94304 U.S.A.

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Acknowledgments

Mentor Graphics is a trademark of Mentor Graphics Corporation in the U.S. and other countries. Microsoft®, Windows®, MS Windows®, Windows NT®, and MS-DOS® are U.S. registered trademarks of Microsoft Corporation. Pentium® is a U.S. registered trademark of Intel Corporation. PostScript® and Acrobat® are trademarks of Adobe Systems Incorporated. UNIX® is a registered trademark of the Open Group. Java™ is a U.S. trademark of Sun Microsystems, Inc. SystemC® is a registered trademark of Open SystemC Initiative, Inc. in the United States and other countries and is used with permission. MATLAB® is a U.S. registered trademark of The Math Works, Inc.. HiSIM2 source code, and all copyrights, trade secrets or other intellectual property rights in and to the source code in its entirety, is owned by Hiroshima University and STARC.

Errata The ADS product may contain references to "HP" or "HPEESOF" such as in file names and directory names. The business entity formerly known as "HP EEsof" is now part of Agilent Technologies and is known as "Agilent EEsof". To avoid broken functionality and to maintain backward compatibility for our customers, we did not change all the names and labels that contain "HP" or "HPEESOF" references.

Warranty The material contained in this document is provided "as is", and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license. Portions of this product include the SystemC software licensed under Open Source terms, which are available for download at <http://systemc.org/>. This software is redistributed by Agilent. The Contributors of the SystemC software provide this software "as is" and offer no warranty of any kind, express or implied, including without limitation warranties or conditions or title and non-infringement, and implied warranties or conditions merchantability and fitness for a particular purpose. Contributors shall not be liable for any damages of any kind including without limitation direct, indirect, special, incidental and consequential damages, such as lost profits. Any provisions that differ from this disclaimer are offered by Agilent only.

Restricted Rights Legend If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Contents

- About Circuit Cosimulation Components
 - AMS_Interface
 - Parameters
 - Pin Inputs
 - Pin Outputs
 - Notes/Equations
 - EnvOutSelector
 - Parameters
 - Pin Inputs
 - Pin Outputs
 - Notes/Equations
 - EnvOutShort
 - Parameters
 - Pin Inputs
 - Pin Outputs
 - Notes/Equations
 - RES
 - Parameters
 - Notes/Equations

About Circuit Cosimulation Components

In Advanced Design System, cosimulation between signal processing and circuits provides verification of the impact of real world analog/RF issues on the signal processing algorithm, and vice versa. The signal processing simulator cosimulates with either Circuit Envelope or Transient simulators.

A circuit subnetwork on the signal processing page is simply a component with input and output ports. Every time the circuit subnetwork is fired, the circuit engine generates output based on the input it receives from the signal processing interface. Once the circuit simulator is finished with the simulation of the signal it receives, it passes those results to the signal processing interface.

From the circuit engine, the signal processing input interface is viewed as an ideal source. Depending on the number of ports at the input interface to the circuit, there would be as many ideal sources feeding the circuit subnetwork. At the output interface of the circuit, there would be one or more interface nodes. At these nodes the signal processing interface receives a given voltage from the circuit.

In cosimulation with Transient engine, the interface does not require any special component. With Circuit Envelope certain information is needed for proper cosimulation; this is done by connecting an EnvOutSelector (or EnvOutShort) component to each output port of the subcircuit design. These two interface components are identical except EnvOutSelector is an open circuit model and EnvOutShort is a short circuit model. Using EnvOutShort will load the circuit with the circuit components (if any) directly on signal processing schematic; EnvOutSelector does not load these components. One or more EnvOutSelector (EnvOutShort) components can be connected to each output port of a circuit subnetwork.

AMS_Interface



Description AMS Export Settings
Library Circuit Cosimulation

Parameters

Name	Description	Default	Type
PortType	port type: electrical, wreal	electrical	enum
TStep	output time step	0.0	real

Pin Inputs

Pin No.	Description
1	input signal

Pin Outputs

Pin No.	Description
2	output signal

Notes/Equations

- This component is used for interfacing between ADS Ptolemy designs and AMS Designer cosimulation designs. To access usage examples, from the ADS Main window, choose File > examples > Tutorial > WLAN_ExportToAMSD_prj. For AMS Designer cosimulation details, refer to the ADS Ptolemy in AMSD-ADE manual in the RFDE documentation.
- AMS_Interface components can be used as output ports in sources designs or input ports in sinks designs. The user must connect one end to a Port component and the other end to a DSP component.
- The PortType parameter specifies the port type of the interface in AMS.
 - electrical is a discipline of the Verilog-A construct that defines the types of nodes, ports, and branches. It consists of two natures: one for the potential (voltage) and one for the flow (current). The values are determined by analog kernel from beginning to end at each point in time.
 - wreal, or real net data type, represents a real-valued physical connection between structural entities. A wreal net can be used for real-valued nets that are driven by a single driver, such as a continuous

assignment. wreal nets must be connected to compatible interconnect and other wreals or real expressions only; they cannot be connected to any other wires.

EnvOutSelector



Description Envelope Output Selector (Open Circuit Model)
Library Circuit Cosimulation

Parameters

Name	Description	Default	Type
OutFreq	output frequency options: Bandpass, Lowpass, Allpass	Bandpass †	enum
† When Bandpass is selected an output frequency value must also be specified.			

Pin Inputs

Pin No.	Description
1	input signal

Pin Outputs

Pin No.	Description
2	output signal

Notes/Equations

1. This component is used for interfacing between circuit subnetwork output and signal processing input under Ptolemy - Circuit Envelope cosimulation. For more general cosimulation information, refer to [About Circuit Cosimulation Components](#).
To access usage examples, from the ADS Main window, choose File > examples > Com_Sys > Co_Sim_prj.
2. EnvOutSelector is an open circuit model; the components at the output of EnvOutSelector will not load the circuit.

3. EnvOutSelector selects the time waveform (associated with a fundamental frequency) from the circuit envelope output.
4. The OutFreq parameter specifies which time domain waveform is selected at the interface and passed to the connecting signal processing component.
 - For the Bandpass option the user must specify an output frequency value. If the frequency specified does not exist in the list of fundamentals, the interface code will search and snap to the nearest fundamental. A frequency within 0.01% of a fundamental will be snapped to that fundamental frequency; if the frequency specified is not within 0.01% of the fundamental, a default value of 100 MHz will be used and a warning message issued.
 - The Lowpass option will output the time-varying dc waveform to signal processing, setting the carrier frequency at the interface to zero.
 - The Allpass option will output the composite time-varying signal; the carrier frequency is set to zero.

Note
 You cannot change between the Bandpass, Lowpass, and Allpass options on the Schematic window; the option must be selected in the component parameter dialog box. When Lowpass or Allpass is selected, changing the option in the Schematic window will reset the value of OutFreq to Allpass or Lowpass, respectively. When Bandpass is selected, OutFreq can be edited to any value. However, if arrow keys are used to set the value of OutFreq to Lowpass or All (or if the Lowpass or All value is typed in), the simulation will error out.

5. Circuit ports are input/output (bidirectional) ports. When a signal processing component has output connected to both a circuit port and another signal processing component input, an EnvOutShort or EnvOutShort component is needed at the circuit port to the input of the second signal processing component.

EnvOutShort



Description Envelope Output Selector (Short Circuit Model)
 Library Circuit Cosimulation

Parameters

Name	Description	Default	Type
OutFreq	output frequency options: Bandpass, Lowpass, Allpass	Bandpass †	enum

† When Bandpass is selected an output frequency value must also be specified.

Pin Inputs

Advanced Design System 2008

Pin No.	Description
1	input signal

Pin Outputs

Pin No.	Description
2	output signal

Notes/Equations

1. This component is used for interfacing between circuit subnetwork output and signal processing input under Ptolemy - Circuit Envelope cosimulation. For more general cosimulation information, refer to [About Circuit Cosimulation Components](#).
To access usage examples, from the ADS Main window, choose File > examples > Com_Sys > Co_Sim_prj.
2. EnvOutShort is a short circuit model; the components at the output of EnvOutShort will load the circuit.
3. EnvOutShort selects the time waveform (associated with a fundamental frequency) from the circuit envelope output.
4. The OutFreq parameter specifies which time domain waveform is selected at the interface and passed to the connecting signal processing component.
 - For the Bandpass option the user must specify an output frequency value. If the frequency specified does not exist in the list of fundamentals, the interface code will search and snap to nearest fundamental. A frequency within 0.01% of a fundamental will be snapped to that fundamental frequency; if the frequency specified is not within 0.01% of the fundamental, a default value of 100 MHz will be used and a warning message issued.
 - The Lowpass option will output the time-varying dc waveform to signal processing, setting the carrier frequency at the interface to zero.
 - The Allpass option will output the composite time-varying signal. Here again the carrier frequency is set to zero.

Note
You cannot change between the Bandpass, Lowpass, and Allpass options on the Schematic window; the option must be selected in the component parameter dialog box. When Lowpass or Allpass is selected, changing the option in the Schematic window will reset the value of OutFreq to Allpass or Lowpass, respectively. When Bandpass is selected, OutFreq can be edited to any value. However, if arrow keys are used to set the value of OutFreq to Lowpass or All (or if the Lowpass or All value is typed in), the simulation will error out.

5. Circuit ports are input/output (bidirectional) ports. When a signal processing component has output connected to both a circuit port and another signal processing component input, an EnvOutSelector or EnvOutShort component is needed at the circuit port to the input of the second signal processing component.

RES



Advanced Design System 2008

Description Resistor
Library Circuit Cosimulation

Parameters

Name	Description	Default	Unit	Type	Range
R	resistance	50 Ohm	ohms	real	$[0, +\infty)$
Temp	temperature of resistor, in degrees C	DefaultRTemp	temperature	real	$[-273.15, +\infty)$

Notes/Equations

1. RES is a resistor circuit component. Signal flow through this resistor includes thermal (Johnson) noise when Temp is greater than absolute zero (-273.15°C).
2. This component operates only with timed baseband or RF (complex envelope) signals.