



**Agilent Technologies**

ADS 2008  
January 2008  
Encrypted HSPICE Simulation

## Advanced Design System 2008

© Agilent Technologies, Inc. 2000-2008

395 Page Mill Road, Palo Alto, CA 94304 U.S.A.

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

### Acknowledgments

Mentor Graphics is a trademark of Mentor Graphics Corporation in the U.S. and other countries. Microsoft®, Windows®, MS Windows®, Windows NT®, and MS-DOS® are U.S. registered trademarks of Microsoft Corporation. Pentium® is a U.S. registered trademark of Intel Corporation. PostScript® and Acrobat® are trademarks of Adobe Systems Incorporated. UNIX® is a registered trademark of the Open Group. Java™ is a U.S. trademark of Sun Microsystems, Inc. SystemC® is a registered trademark of Open SystemC Initiative, Inc. in the United States and other countries and is used with permission. MATLAB® is a U.S. registered trademark of The Math Works, Inc.. HiSIM2 source code, and all copyrights, trade secrets or other intellectual property rights in and to the source code in its entirety, is owned by Hiroshima University and STARC.

**Errata** The ADS product may contain references to "HP" or "HPEESOF" such as in file names and directory names. The business entity formerly known as "HP EEsof" is now part of Agilent Technologies and is known as "Agilent EEsof". To avoid broken functionality and to maintain backward compatibility for our customers, we did not change all the names and labels that contain "HP" or "HPEESOF" references.

**Warranty** The material contained in this document is provided "as is", and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

**Technology Licenses** The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license. Portions of this product include the SystemC software licensed under Open Source terms, which are available for download at <http://systemc.org/>. This software is redistributed by Agilent. The Contributors of the SystemC software provide this software "as is" and offer no warranty of any kind, express or implied, including without limitation warranties or conditions or title and non-infringement, and implied warranties or conditions merchantability and fitness for a particular purpose. Contributors shall not be liable for any damages of any kind including without limitation direct, indirect, special, incidental and consequential damages, such as lost profits. Any provisions that differ from this disclaimer are offered by Agilent only.

**Restricted Rights Legend** If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

## Contents

- About Encrypted HSPICE Simulation
- Using the HSPICE Transient Controller
- HSPICE Transient Simulation Parameters
  - Defining the Frequency and Time Setup
  - Setting Up Optional Parameters
  - Saving Output Data

## About Encrypted HSPICE Simulation

This documentation describes the Encrypted HSPICE Transient simulation controller ( HS\_Tran ). It provides details about using the controller and describes its parameters. For complete information about using the HS\_Tran controller within the encrypted HSPICE flow, see the [Encrypted HSPICE Flow](#) documentation.

The HS\_Tran controller is used to perform a transient analysis only when a network contains encrypted HSPICE models. The controller creates a frequency-domain model for the unencrypted portion of the network. The HSPICE transient analysis performs the transient analysis on the complete network.

## Using the HSPICE Transient Controller

The HS\_Tran controller is available on the Signal Integrity-Verification component palette. When using the HS\_Tran controller, other controllers such as DC or AC cannot be present in the design. Also, no DSP cosimulation is allowed such as an ADS Ptolemy cosimulation. If an additional controller is present, the simulator will terminate the simulation with an error message.

The unencrypted portion of the design can contain only linear devices, and selected voltage and current sources. The following table lists the allowed sources.

Sources allowed for encrypted HSPICE Transient Simulation

Component	Description
The allowed voltage sources are:	
V_DC	DC
VtStep	Step
VtPulse	Pulse
VtPWL	Piecewise Linear
VtExp	Exponential Decay
VtSine	Decaying Sine Wave
VtSFFM	Single Frequency FM
VtBitSeq	Bit Sequence
VtImpulse	Impulse
VTLFSR	LFSR
The allowed current sources are:	
I_DC	DC
ItStep	Step
ItPulse	Pulse
ItPWL	Piecewise Linear
ItExp	Exponential Decay
ItSine	Sine

## HSPICE Transient Simulation Parameters

ADS provides access to HSPICE Transient simulation parameters enabling you to define aspects of the simulation listed in the following table:

Tab Name	Description	For details, see...
Freq/Time Setup	Sets parameters related to time and frequency.	<a href="#">Defining the Frequency and Time Setup</a>
Options	Sets parameters to check model passivity, and defines HSPICE options used in the HSPICE analysis context.	<a href="#">Setting Up Optional Parameters</a>
Output	Selectively save simulation data to a	<a href="#">Saving Output Data</a>

	dataset.	For details about setting Output parameters, see <a href="#">Selectively Saving and Controlling Simulation Data</a> .
Display	Control the visibility of simulation parameters on the schematic.	For details, see <a href="#">Displaying Simulation Parameters on the Schematic</a> .

**Note**  
 To specify the temperature, place an ADS Options component on the schematic. The Options component is available on any of the analog/RF simulation palettes, such as Simulation-AC and Simulation-Transient. This temperature setting will apply to both of the ADS and HSPICE simulations. For details about the Options component, see [Using the Simulator Options Component](#).

## Defining the Frequency and Time Setup

Following is information on the parameters related to time and frequency. The following table describes the parameter details. Names listed in the Parameter Name column are used in netlists and on schematics.

HSPICE Transient Simulation Frequency and Time Setup Parameters

Setup Dialog Name	Parameter Name	Description
Frequency Setup		Together, FreqStep and FreqStop set the range of frequencies used to characterize the unencrypted network in the frequency domain which will be used by the convolution engine. If the simulator finds a transient source with a higher bandwidth, then the simulator will adjust the user-specified frequency range to the higher frequency. Specifying a better frequency resolution and a higher frequency range may result in better accuracy, but will also result in more simulation time.
Frequency step	FreqStep	
Frequency stop	FreqStop	
Time Setup		Together, TimeStep and TimeStop set the time range over which the transient analysis is performed.
Time step	TimeStep	
Time stop	TimeStop	

## Setting Up Optional Parameters

## Advanced Design System 2008

Following is information on setting up the optional parameters for the HSPICE Transient simulation. The following table describes the parameter details. Names listed in the Parameter Name column are used in netlists and on schematics.

### HSPICE Transient Simulation Options

Setup Dialog Name	Parameter Name	Description
Enforce Passivity	EnforcePassivity	When this option is selected, the controller determines if the frequency model is passive. If it finds that the data is not passive, the simulator will adjust the frequency model such that passivity is ensured.
HSPICE Options		For details about the HSPICE simulator's Global Parameters and Options, see the hspice.pdf documentation provided with the simulator.
Global Parameters		Use this entry to specify the Global Parameters that will be used within the HSPICE analysis context. The entries are names that are associated with numeric values. The equivalent HSPICE netlist output is: .PARAM <name> = <value>
Name	GlobalParamName	
Value	GlobalParamValue	
Options		Use this entry to specify the Options that will be used within the HSPICE simulator. The entries are names that are associated with numeric values, or names only if no numeric value is required. The equivalent HSPICE netlist output is: .OPTION <name> = <value> (when a value is specified) .OPTION <name> (when a value is not specified)
Name	OptionName	
Value	OptionValue	

## Saving Output Data

The parameters on the Output tab work the same as for all other analog/RF analysis controllers to create an Output Plan, which controls the data that will be saved to the dataset. Although the parameter Save by hierarchy: Node Voltages is selected by default for the Transient simulation controller, this parameter is left unselected for the HS\_Tran controller to improve simulation speed. For details about setting Output parameters, see [Selectively Saving and Controlling Simulation Data](#).

