Installation Note

Agilent Signal Generators Hole Plug Foot Installation for Rack Mount Kits

NOTE For the latest revision of this installation note, go to *www.agilent.com.*

Agilent Technologies

Part Number N5180-90019
Printed in USA December 2007

N5180-90019

Notice

The information contained in this document is subject to change without notice.

Agilent Technologies makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

© Copyright 2006, 2007 Agilent Technologies Inc.

Hole Plug Foot Installation for Rack Mount Kits

Products Affected:	All
Serial Numbers:	All
Options:	1CM, 1CP, 1CR, and E8251-60419
To Be Performed By:	(X) Agilent Technologies Service Center (X) Personnel Qualified by Agilent Technologies (X) Customer
Estimated Installation Time:	0.25 hours
Estimated Verification Time:	n/a

Introduction

This installation kit adds the bottom hole plug feet to all Agilent Technologies signal generators.

Installation Kit Parts List

Item	Quantity	Description	Part Number
1	1	Installation Note	N5180-90019
2	4	Hole Plug, Bottom Foot	W1312-40032

Typical Safety Considerations

WARNING **Before you disassemble the signal generator, turn the power switch off and unplug the power cord. Failure to unplug the signal generator can result in personal injury.**

CAUTION Electrostatic discharge (ESD) can damage or destroy electronic components. All work on electronic assemblies should be performed at a static-safe workstation.

Install Bottom Hole Plug Feet

1. Recommended: Disconnect the power cord.
2. With the signal generator on its side, pry the black slot tabs (1) out from the four bottom feet (2).
3. Remove the four feet by lifting the foot tab and sliding the foot in the direction of the arrow printed on the foot.

Figure 1 Bottom View

4. Install the bottom Hole Plug feet by placing the single tabbed end of the foot (see Figure 2) into its hole first, then gently press the remaining tabs into the other holes, one at a time, until they click.
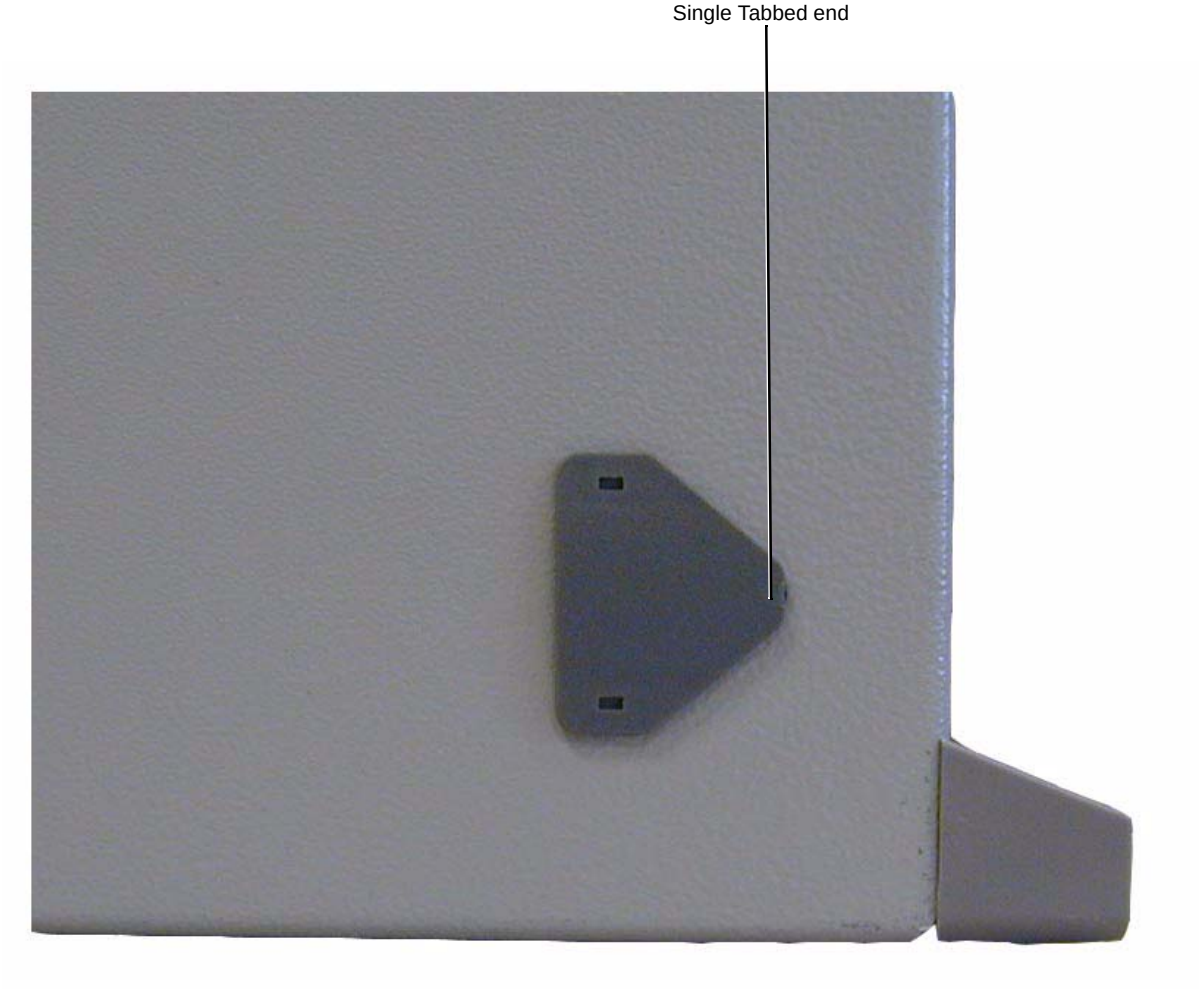
Figure 2