


# Memory-Depth Requirements for Serial Data Analysis in a Real-Time Oscilloscope

Application Note 1495

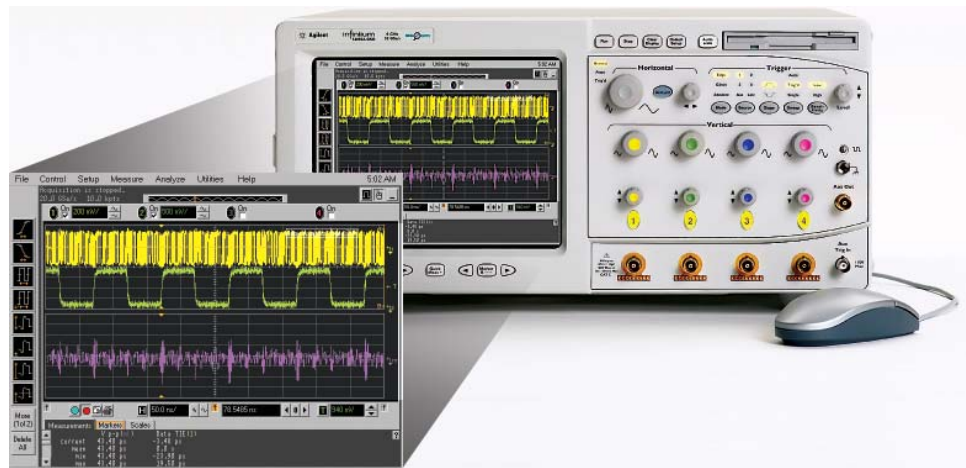

## Table of Contents

Introduction.....	1
Low-frequency, or infrequently occurring jitter.....	2
Examining all the combinations in a pseudorandom binary sequence.....	5
Extrapolating to a desired bit error rate.....	6
Advantages of software clock recovery.....	5
Conclusion.....	6
Glossary.....	6
Support, Services, and Assistance.....	7

## Introduction

If you are designing high-speed devices that employ embedded clocks, you need to be able to characterize serial data streams. You can use Agilent Technologies' 54830 and 54850 Series Infiniium real-time oscilloscopes along with Agilent E2688A high-speed serial data analysis (SDA) software for this task. Before you begin, however, you need to ensure that your oscilloscope has enough memory for serial data and jitter analysis. How much memory you need depends on what you were trying to accomplish. This

application note examines some common validation and troubleshooting tasks to determine how much memory you need. We will look at memory requirements for:

- Examining low-frequency or infrequently occurring jitter
- Examining all the combinations of bit sequences in a pseudorandom binary sequence (PRBS)
- Achieving a desired confidence level of meeting a bit-error-rate goal



Agilent Technologies

# Low-frequency, or infrequently occurring jitter

If the serial data signal is modulated at a low frequency, and you want to measure the jitter, you need a certain minimum memory depth. For example, if you have a 2.5-Gb/s signal captured by a scope with a 20-GSa/s sampling rate and 1-M of memory, you capture 50-microseconds of elapsed time, which would allow you to view one cycle of jitter at a frequency of 20-kHz.

Measuring low-frequency jitter is sometimes not important, as the clock recovery phase-locked loop (PLL) in most serial data receivers can reject jitter at low frequencies. But sometimes an event occurring at a low repetition rate can cause bursts of jitter or noise that contain higher frequencies that the PLL cannot reject. An example is shown in Figure 1. The top (yellow) trace is a serial data signal. The middle (green) trace is an uncorrelated aggressor signal that is inducing short-term bursts of jitter in the data signal. The bottom (purple) trace is a jitter trend signal, which is simply a time plot of the timing of each edge in the data stream compared to the “ideal” recovered clock. You can see that there is a burst of timing errors that coincides with each transition in the green aggressor signal.

If the data rate of your signal allows it, you may be able to use a lower sampling rate to extend the time duration captured on each

trigger. For example, for a data rate of 1-Gb/s and a rise time of 300-ps, you would be able to capture all the frequency content of the signal sufficiently at a sampling rate of 10-Gb/s. In this case, 1-M of memory would capture 100-microseconds worth of data, allowing you to see a full cycle of jitter at 10-kHz.

Table 1 shows the minimum jitter frequency, or burst occurrence rate, that can be captured as a function of memory depth, for a sampling rate of 20 GSa/s.

Tip: If you suspect something in your power supply is sending out bursts of noise or jitter at power line crossovers, you can trigger on the power line and see if there is a stable burst on the jitter trend waveform. If you do see a stable burst, it confirms your hypothesis.

Most switching power supplies operate above 20-kHz, so 1-M memory in a scope sampling at 20-GSa/s is usually sufficient to capture problems that are correlated to switching power supplies.

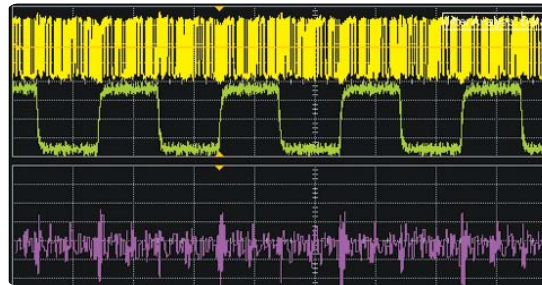


Figure 1. Jitter on a signal (top, yellow trace) caused by coupling from another signal (middle,

Memory depth, captured samples	Time duration of capture (seconds)	Lowest frequency captured (one full cycle)
256 K	1.28E-5	78.13 kHz
1 M	5E-5	20 kHz
32 M	1.6E-3	625 Hz
100 M	5E-3	200 Hz

Table 1. Memory depth, time duration of capture, and lowest frequency

# Examining all the combinations in a pseudorandom binary sequence

The advantage of using a pseudorandom binary sequence as a stimulus in testing systems is that it contains all the possible sequences of numbers of ones and zeros, limited only by the length of the PRBS. A  $2^N-1$  PRBS sequence will contain one sequence of N-1 zeros followed by N ones, along with all combinations of <N zeros followed by <N ones.

The length of PRBS pattern you should use depends on the serial bus that you are designing. The longest run of consecutive ones or zeros in the PRBS you choose should match the longest consecutive run of ones or zeros in the serial bus you're designing. If your bus uses 8b/10b encoding, for example, you only need to test using a  $2^5-1$  PRBS.

To view the effects of all the various combinations, you should capture the entire PRBS. If you analyze a single acquisition that is shorter than the entire PRBS, you will be missing some combinations. By running repetitively, you may still have a fair chance of seeing all parts of the sequence after some indeterminate time, as the scope will most likely retrigger more or less randomly at various points within the PRBS. But capturing the entire PRBS on each trigger gives you 100 percent assurance.

Table 2 shows the memory required to capture all of a PRBS sequence for a 2.5-Gb/s bit rate and a scope sampling at 20-GSa/s. The math is very straightforward for other combinations:

$$\text{Number of cycles captured} = \frac{[(\text{memory depth}) \times (\text{data rate})]}{(\text{scope sampling rate})}$$

$2^7-1$  and  $2^{11}-1$  are commonly used pattern durations; both fit easily in 256-K of memory. A  $2^{16}-1$  sequence will fit in 1-M of memory. For sequence lengths not shown in Table 2, or for other sampling rates and data rates, you can easily calculate the memory required.

PRBS length	Unit intervals in entire sequence	Memory required (samples)
$2^7-1$	127	1 K
$2^{11}-1$	2047	16 K
$2^{16}-1$	6.554E4	524 K
$2^{32}-1$	4.29E9	3.44E10

Table 2. Memory required to capture various PRBS lengths, for a bit rate of 2.5

## Extrapolating to a desired bit error rate

How long do you need to let a scope mask or jitter test run before you can feel confident your system will meet a given bit error rate (BER)?

For a bit error rate of, say,  $10^{-12}$ , you could have a large number of errors in the first few bits you examine; on the other hand, you also could see zero errors in  $10^{16}$  (or any arbitrarily large number) of consecutive bits. You could determine the bit error rate with near 100 percent confidence, but this could take an unnecessarily long time, especially if you never see any violations. Assuming you get no violations, you can calculate the confidence interval for predicting a given error rate from less data. Table 3 shows how many error-free bits you would have to observe to achieve the indicated confidence level for a given BER.

Although the correlation between a scope and a bit error ratio tester (BERT) is quite good, a scope gives you an estimate of the bit error rate, not a measurement. To achieve the ultimate confidence that you've met your error rate goals, you'll need to use a BERT. This is particularly true for very small error rates. The problem is that the scope's jitter noise floor and vertical noise floor begin to creep into the measurement and set a floor on the measurable error rate.

If you do see some errors, then the numbers in Table 3 are invalid and you cannot extrapolate from them. In that case, you need to let the system run until you see 10-15 errors to have good confidence that the number of violations divided by the number of unit intervals (UIs) tested is a good predictor of the long-term bit error rate. That can take an indeterminate length of time, assuming errors occur randomly.

Table 4 shows the relationship between memory depth, number of UIs captured on each acquisition, and the total number of acquisitions required to achieve 95 percent and 99 percent confidence of  $<10^{-12}$  BER. The table assumes, again, a 2.5-Gb/s data rate and a scope sampling at 20-GSa/s.

The E2688A serial data analysis packages will report the number of UIs examined and the number of failed UIs. You can calculate how many unit intervals are contained in each acquisition:

$$\text{Number of UIs} = (\text{memory time duration}) \times (\text{bit rate})$$

$$\text{Memory time duration} = (\text{memory depth}) / (\text{sampling rate})$$

$$\text{Thus (number of UIs)} = [(\text{memory depth}) \times (\text{bit rate})] / (\text{sampling rate})$$

Confidence level required	Number of unit intervals without violation
95%	$3.84/\text{BER}$
99%	$6.66/\text{BER}$

Table 3. Confidence level as a function of number of unit intervals.

Memory depth	UIs captured at bit rate = 2.5 Gb/s, sampling rate = 20 GSa/s	Number of violation-free acquisitions to achieve 95% confidence of BER $<10^{-12}$	Number of violation-free acquisitions to achieve 99% confidence of BER $<10^{-12}$
256 K	32 K	1.2E8	2.081E8
1 M	125 K	3.072E7	5.328E7
32 M	4 M	9.6E5	1.665E6
100 M	12.5 M	3.072E5	5.328E5

Table 4. Memory depth and number of violation-free acquisitions needed to achieve 95% and 99% confidence in  $10^{-12}$  BER, with a bit rate of 2.5-Gb/s and a sampling rate of 20-GSa/s.

# Advantages of software clock recovery

If statistical confidence is important, it's worth mentioning that scopes that recover the clock in software and reconstruct the eye from that clock have significant advantages over older methods of eye diagram measurements. In the days of separate clock and data signals, you triggered the scope on the clock signal and viewed an eye diagram of the data signal. This led to the following limitations:

## Trigger jitter

Trigger jitter in the scope added to the jitter of the measurement. With software clock recovery, trigger jitter does not affect the measurement results at all. The scope could be triggered on anything, or free-running with no active trigger source at all.

## False trigger

All scopes have some rate of false triggers, caused by violation of setup and hold in the trigger flip-flops. While the rate of false triggers is very low, it can affect the measurement statistics for very low bit-error rates. Once again, with software clock recovery, false triggers are not a problem.

# Conclusion

The scope memory depth required to analyze serial data signals depends on the task you intend to accomplish. The guidelines in this application note should help you decide how much memory you need.

# Glossary

**Bit error ratio** The number of bits with errors divided by the total number of bits that have been transmitted, received or processed over a given time period

**Jitter** Timing error associated with the placement of digital signal edge transitions relative to their ideal location. This timing error, often referred to as time interval error (TIE) or phase jitter, can be composed of both deterministic and random error sources.

**Real-time oscilloscope** An oscilloscope that uses high-speed sampling in order to capture signals in a single-shot acquisition

**8b/10b encoding** A method of encoding serial data to ensure a sufficient frequency of transitions to maintain synchronization of the clock and data recovery phase-locked loop. 10 bits are transmitted for every 8 bits of data.

## Related Literature

Publication Title Number	Publication Type	Publication
<i>Infiniium 54830 Series Oscilloscopes</i>	Data Sheet	5988-3788EN
<i>Infiniium 54850 Series Oscilloscopes InfiniiMax 1130 Series Probes</i>	Data Sheet	5988-7976EN
<i>Agilent Technologies E2688A, N5384A High-Speed Serial Data Analysis and Clock Recovery Software for Infiniium 54830 and 54850 Series Oscilloscopes</i>	Data Sheet	5989-0108EN



## Agilent Technologies Oscilloscopes

Multiple form factors from 20 MHz to >90 GHz | Industry leading specs | Powerful applications

## Agilent Email Updates

[www.agilent.com/find/emailupdates](http://www.agilent.com/find/emailupdates)  
Get the latest information on the products and applications you select.

## Agilent Direct

[www.agilent.com/find/agilentdirect](http://www.agilent.com/find/agilentdirect)  
Quickly choose and use your test equipment solutions with confidence.

## Agilent Open

[www.agilent.com/find/open](http://www.agilent.com/find/open)  
Agilent Open simplifies the process of connecting and programming test systems to help engineers design, validate and manufacture electronic products. Agilent offers open connectivity for a broad range of system-ready instruments, open industry software, PC-standard I/O and global support, which are combined to more easily integrate test system development.

## LXI

[www.lxistandard.org](http://www.lxistandard.org)  
LXI is the LAN-based successor to GPIB, providing faster, more efficient connectivity. Agilent is a founding member of the LXI consortium.

## Remove all doubt

Our repair and calibration services will get your equipment back to you, performing like new, when promised. You will get full value out of your Agilent equipment throughout its lifetime. Your equipment will be serviced by Agilent-trained technicians using the latest factory calibration procedures, automated repair diagnostics and genuine parts. You will always have the utmost confidence in your measurements.

Agilent offers a wide range of additional expert test and measurement services for your equipment, including initial start-up assistance, onsite education and training, as well as design, system integration, and project management.

For more information on repair and calibration services, go to:

[www.agilent.com/find/removealldoubt](http://www.agilent.com/find/removealldoubt)

[www.agilent.com](http://www.agilent.com)  
[www.agilent.com/find/xxxx](http://www.agilent.com/find/xxxx)

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

[www.agilent.com/find/contactus](http://www.agilent.com/find/contactus)

### Americas

Canada	(877) 894-4414
Latin America	305 269 7500
United States	(800) 829-4444

### Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

### Europe & Middle East

Austria	01 36027 71571
Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700*
	*0.125 €/minute
Germany	07031 464 6333**
	**0.14 €/minute
Ireland	1890 924 204
Israel	972-3-9288-504/544
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
Switzerland	0800 80 53 53
United Kingdom	44 (0) 118 9276201

Other European Countries:

[www.agilent.com/find/contactus](http://www.agilent.com/find/contactus)

Revised: July 17, 2008

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2008  
Printed in USA, August 27, 2008  
5989-1256EN



**Agilent Technologies**